


SENIOR POWER CABLE FEED PARTS LIST
for Sewerooter Senior and Speedrooter

CAT. NO.	DESCRIPTION	CAT. NO.	DESCRIPTION
PO-SR/GT	SR Power Cable Feed & Guide Tube	* PO-400-1	Bottom Roller Assembly (Serial #2465 & Up)
PO-101-1	Feed Body	PO-410-1	Bottom Plated Steel Carrier (Serial #2465 & Up)
PO-101-A	Spout	PO-420-1	Swing Pin (Serial #2465 & Up)
PO-101-B	Lifting Spring	PO-425-1	Bottom Roller Shaft (Serial #2465 & Up)
PO-102	Mounting Stud w/Knob & Washer	PO-450-1	Bottom Roller w/Bearing (Serial #2465 & Up)
PO-103	Mounting U-Bolt for SR (Thru. Serial #SR11606)	* PO-510-1	Thrust Bearing Support Pad (Serial #2465 & Up)
* PO-200-1	Top Roller Assembly (Serial #2465 & Up)	PO-530	Thrust Bearing
PO-210-1	Top Plated Steel Carrier	PO-540	Cable Adjustment Plate
PO-220-1	Swing Pin (Serial #2310 & Up)	PO-541	Plate Screws & Washers (3)
PO-225-1	Feed Roller Shaft (Serial #2465 & Up)	PO-601-1	Feed Control Disc w/Lever & Knob
PO-250-1	Feed Roller w/Bearing (Serial #2465 & Up)	PO-601-1-A	Lever & Knob for Control Disc
PO-301	Feed Pressure Knob	PO-635	Wave Washer
PO-301-A	Limiting Nut	PO-640	Feed Control Retaining Cover
* PO-315-1	Pressure Spring (Serial #2465 & Up)	PO-641	Retaining Cover Screws (3)
* PO-330	Ball Bearing	PO-703	Set of Rollers (3)
* PO-331-1	Ball Bearing Holder (Serial #2465 & Up)	PO-RK	Power Feed Repair Kit
PO-340	Top Cover Plate	PO-DECAL	Set of Safety Decals
PO-341	Cover Screws & Washers (3)	SR-GT	Guide Tube for Senior

*Denotes part included in PO-RK

Note: Parts for the Senior and Speedrooter Power Cable Feed WILL NOT interchange with parts for the Speedrooter 90/91/92 Power Cable Feed.

POWER CABLE FEED SCHEMATIC DIAGRAM

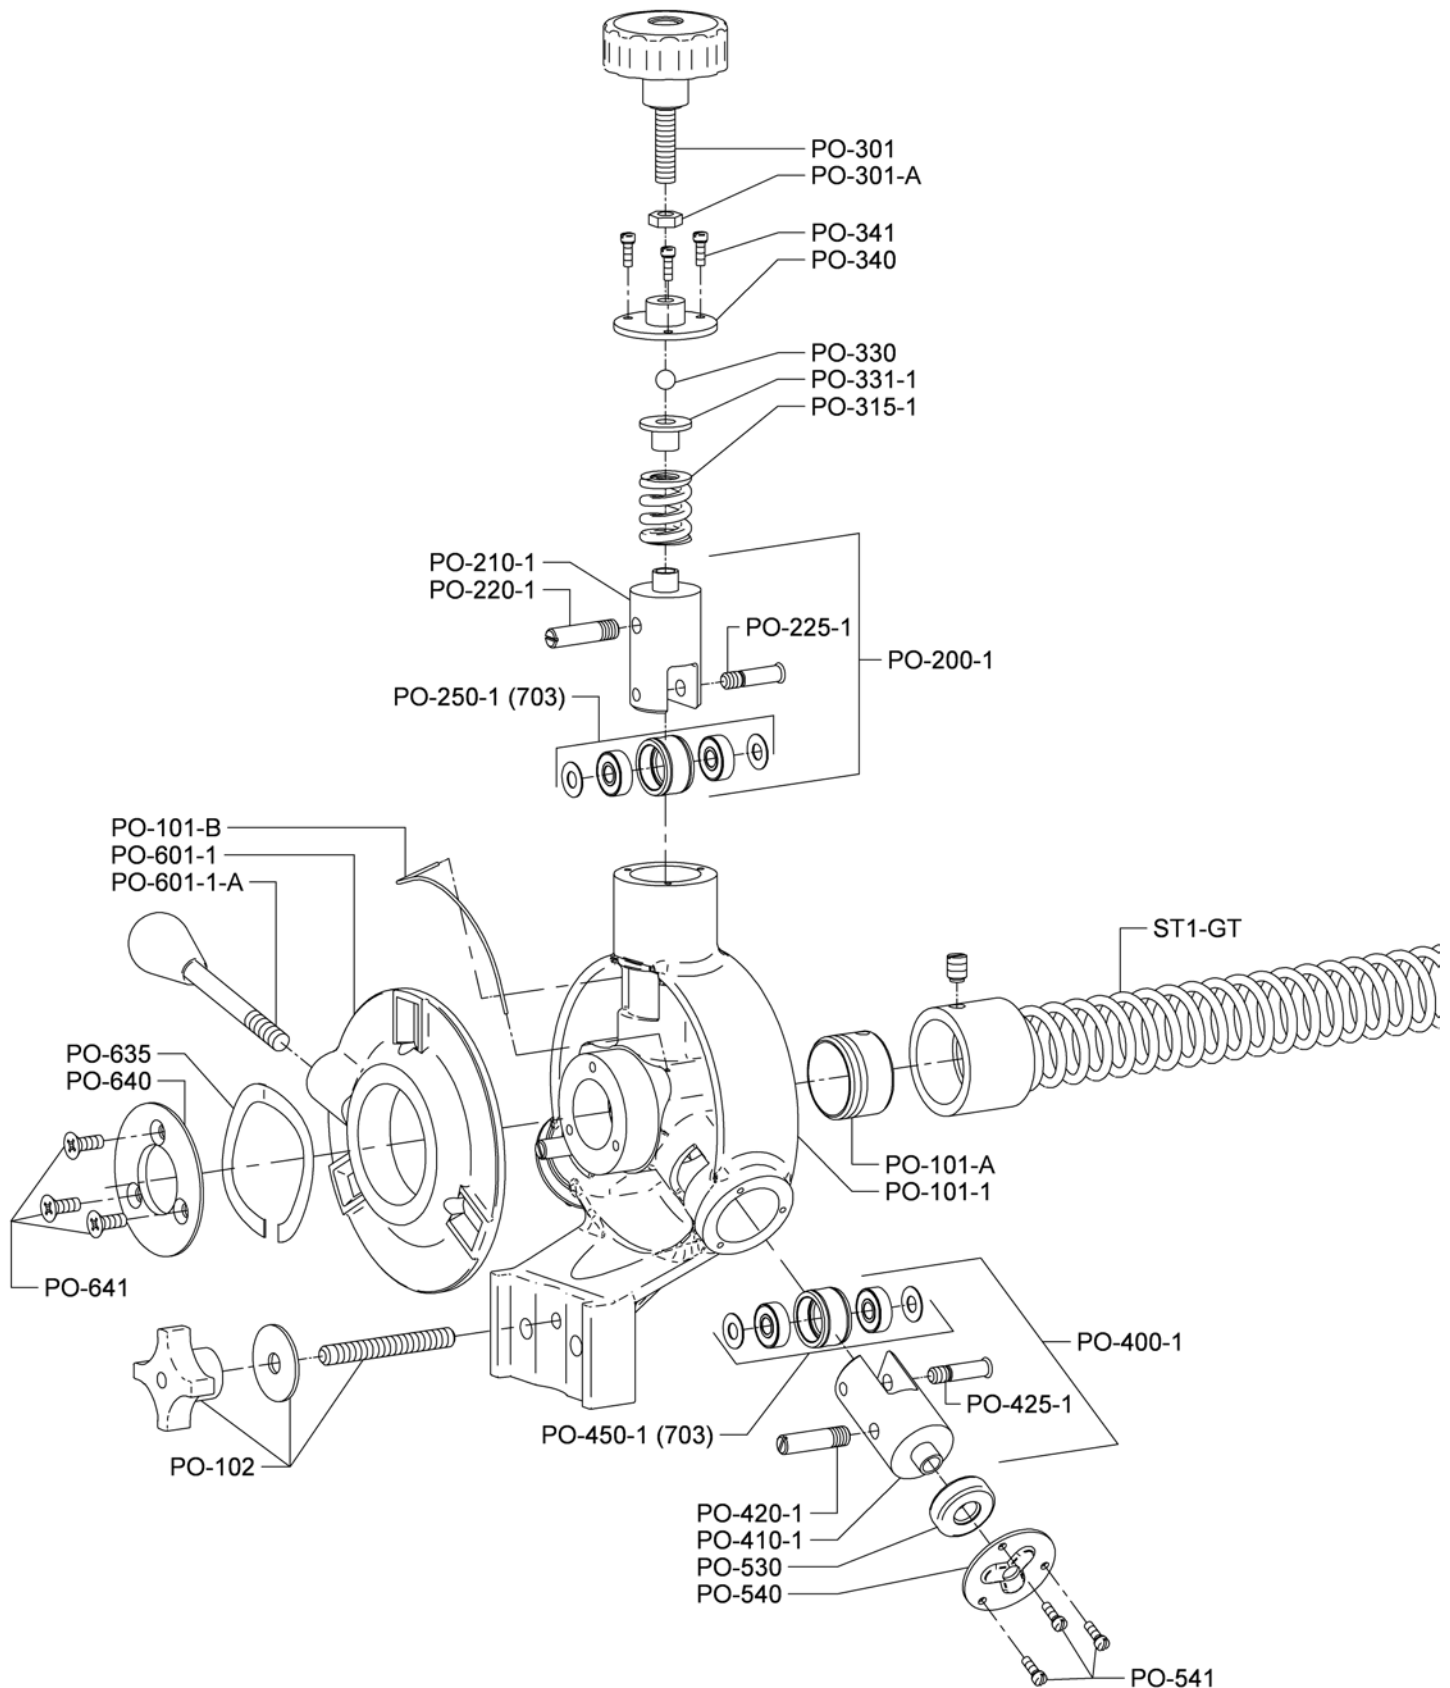

IMPORTANT: When ordering, give Serial Number of Machine.